 




# ACCUTUBE USER GUIDE

## **TUBE PREPARATION**





## DIRECT FILL

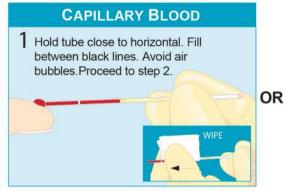


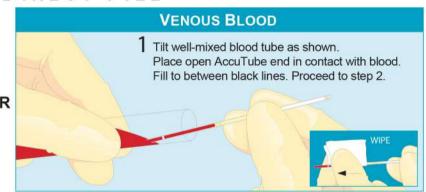

## PIPETTER FILL

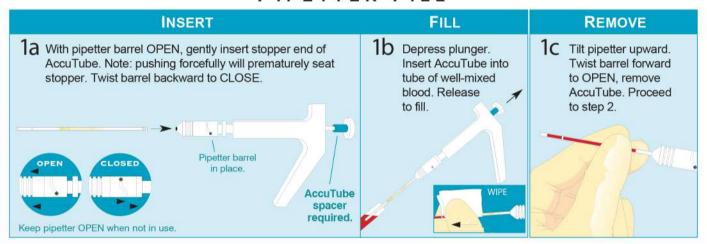

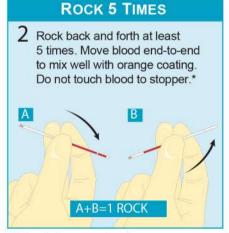

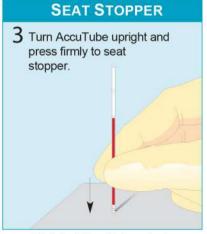





# INSERT FLOAT 4 Slide open end of AccuTube over float to partially insert it. Gently lift AccuTube up and out of SoftGrip. Push float against back of package to fully insert. Do not touch floats with fingers.




# ACCUTUBE USER GUIDE

# CENTRIFUGATION AND READING

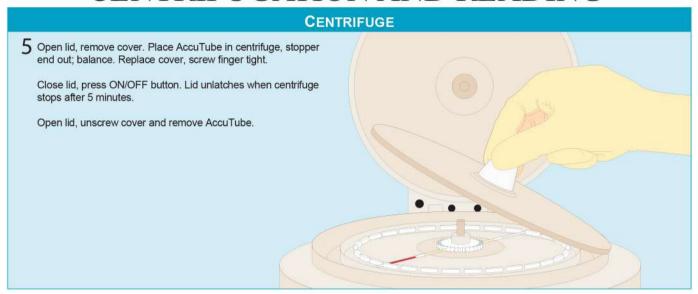


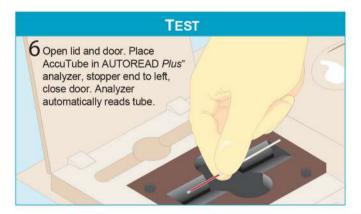

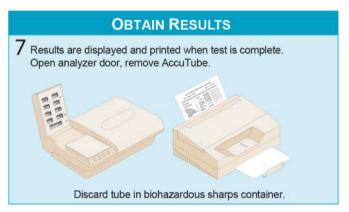


See Operator's/Service Manual for further instructions.

## ACCUTUBE SPACER PLACEMENT

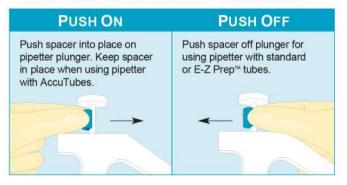

### PIPETTER BARREL REPLACEMENT

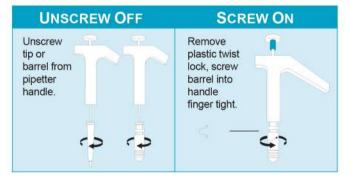



Old Station Park Buildings, St. John Street, Horwich, Bolton, BL6 7NY, UK **Tel:** +44 (0) 1204 460446 **Email:** sales@woodleylabdiagnostics.com **Web:** www.woodleyequipment.com